


<p>WATERPROOF BLUETOOTH SPEAKER</p> <p>Quick Start Guide & User Manual</p> <p>www.drycase.com (910) 791-0009</p>	<p>KEY FUNCTION</p> <p> 1. Press and hold the power button for 3 seconds to switch speaker on and off. 2. Click power button once to switch multiple color LED light models in turn. • Rotating light colors • One light color • No light color</p> <p> Click once to hear previous song. Press and hold to turn down the volume.</p> <p> Click once to hear next song. Press and hold to turn up the volume.</p> <p> 1. Press to play or pause the music. Press to answer or end a phone call. 2. Press and hold to reject incoming call. 3. Double click to redial the last phone call.</p>	<p>M 1. Press to switch between Bluetooth and FM radio. 2. Press and hold to cut off the current Bluetooth connection.</p> <p>MAIN FEATURES</p> <ul style="list-style-type: none"> • Waterproof IP grade: IP67 • Bluetooth 4.0 wireless connection • Handsfree calling • Buoyant Design • FM radio • Multiple color LED light • Charging by micro USB
<p>PACKAGE CONTENTS</p> <ul style="list-style-type: none"> • Dry Vibes Waterproof Bluetooth Speaker • USB Charging Cable • User Manual <p>ATTACHMENTS</p> <ul style="list-style-type: none"> • Bike Mount • Tripod Mount • Suction Cup • Carabiner Mount 	<p>WIRELESS PAIRING</p> <p>Charge Dry Vibes for 3 full hours prior to initial use.</p> <ol style="list-style-type: none"> 1. Be sure the speaker is in power off mode. Place media device next to speaker. Press & hold the power button for 3 seconds to enter pairing mode. 2. Activate Bluetooth on media device and select "Dry Vibes" from the list. Enter "0000" if the media device prompts for a password. 3. If pairing fails, clear all unused prior Bluetooth connection from media device. Turn off Dry Vibes and Bluetooth connection and start again from Step 1. 	<p>RECHARGING THE SPEAKER</p> <p>The wireless speaker is powered by a built-in rechargeable lithium ion battery that can be operated with the following steps.</p> <ol style="list-style-type: none"> 1. Open the charging port cover. 2. Connect the USB charging cable to a standard USB charging port.

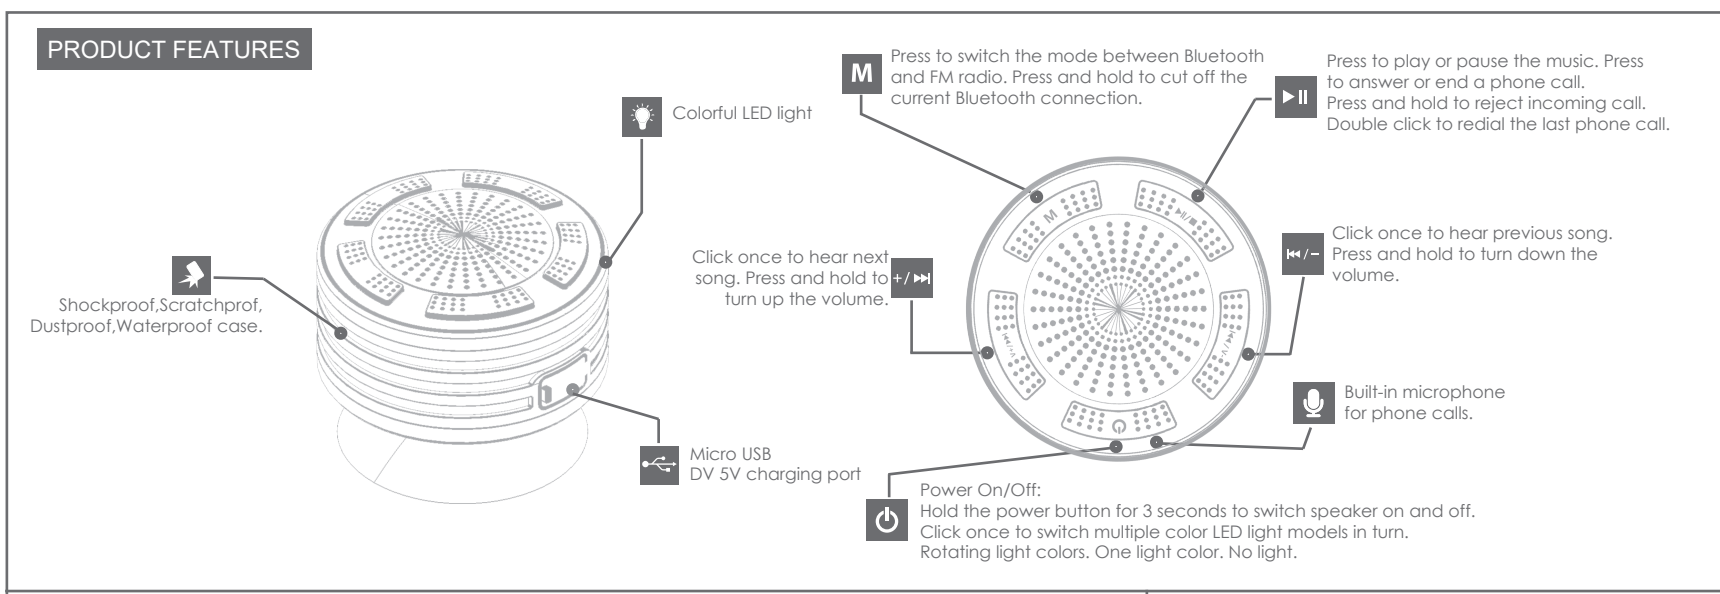

TROUBLE SHOOTING			SAFETY INSTRUCTIONS		
Symptoms	Causes	Solutions	<ol style="list-style-type: none"> 1. Make sure the plug cover is closed tightly before exposing speaker to water 2. Keep the speaker out of reach of children. Clean the speaker with soft cloth without using harsh corrosive chemicals. Always unplug from power source before cleaning. 3. Do not puncture or disassemble the exterior surface of the speaker in any way 4. Do not insert any metal object into speaker. 5. Do not heat speaker to excess 		
8 fmJ JYgk c b f i t i f b ' o n	Low battery level	Recharge the battery			
Not able to pair with the speaker	8 fmJ JYg is a l f y U X m d U J Y X ' k J h ' U b c t h Y f a Y X J U X Y j J W "	Refer to "Wireless pairing section" on the previous page			
Volume too low	% Battery is not charged & "J olume is not set 't c max on both 8 fmJ JYg & media X Y j J W "	% D f Y g g U b X ' c X J c i a Y I d ' i t t c b " & "Increase the volume on the media X Y j J W "			
FM Radio Signals	% Felocate 8 fmJ JYg to open environment" & " A c j Y ' 8 fmJ JYg away from other electronic devices to reduce the interferences. ' " If applicable, plug in thY charging cable as an external antenna 't c ' increase signal strength				